


Removing Freezer compartment

There are two temperature sensors in the fridge. You can either select the Freezer zone sensor, or the Cooling zone sensor.

Make sure you select the *Cooling zone sensor*. This is **Re** at the display.

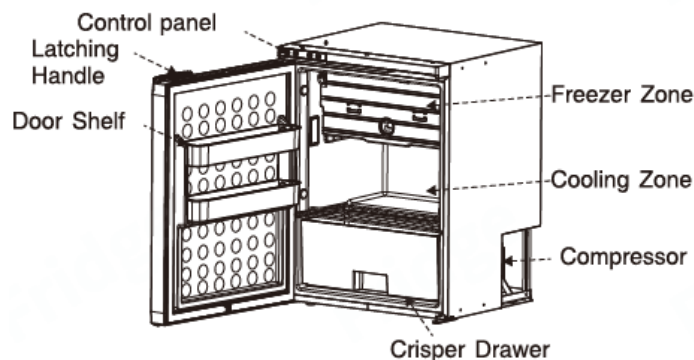

1. Remove the compartment divider
2. Turn on the fridge
3. Press 
If **Fr** is displayed, press  again to select **Re** setting.
4. If **Re** is displayed, press **+** or **-** to adjust the temperature of the Cooling zone.
Always change the temperature, to make sure the sensor is active!

Examples:

There is a fixed temperature difference of 20°C between *Freezer zone* and *Cooling zone*.

Cooling zone set at 7°C will set Freezer zone at -13°C

Cooling zone set at 0°C will set Freezer zone at -20°C

Cooling zone set at 2°C will set Freezer zone at -18°C

Resetting the Fridge

You can reset the fridge to standard **Re** setting.

Power off the fridge

Press  until **E1** is displayed

Press **+** or **-** at the same time, until **888** is displayed